


2" Tube & Gel Pac – Waters for 30-45 Days

The DRiWATER Tube & Gel Pac is the perfect choice for deep pots or permanent watering.

Step-by-Step Installation of 2" Tube & Gel Pac



1. Water plant thoroughly before applying DRiWATER®.

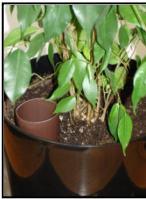

2. Dig a hole that is 2" in diameter and 3" deep. Gently push the tube midway into the root zone, making certain it does not reach the bottom of the container. Lightly water inside the tube.



3. Carefully cut open the Gel Pac and remove from plastic casing. Dip the Gel Pac in water so it slides in the tube easily. Make sure that the gel pac sinks to the bottom of the tube and touches the soil. Replace the cap.



4. When the tube is empty, refill with an additional Gel Pac. Enjoy!

Container Size	# of Tubes	Supplemental Watering
8"	1	Installation
10"	1-2	Installation
12"	2	Installation
14"	3	Installation
16"	4	Installation
18"	4	Installation
20"	5	Installation

Other great DRiWATER® products:

2" Gel Pac waters for up to 30 days



- Indoor Pots
- Hanging Plants
- Poinsettias



Quart waters for up to 90 days

- Vegetable Gardens
- Trees
- Shrubs



PT Delivery System waters for up to 30 days

- Hanging Baskets
- Roses
- Large Pots